

## 7\*10W Led Wash Moving Head

### 14 Channel Mode

NOTE: The Pan fine channel is inverted and the Tilt Fine channel is inverted too. In 16bit resolution, when you pass a dmx step of the pan(for example), it moves and then returns back because the pan fine is inverted.

Channel	Function	Values
1	Pan	0-255
2	Pan Fine	NOTE: Pan Fine is Inverted. Instead of 0-255 it should be 255-0
3	Tilt	0-255
4	Tilt Fine	NOTE: Tilt Fine is Inverted. Instead of 0-255 it should be 255-0
5	PT Speed	0(Fast) -255 (slow)
6	Intensity	0-134
	Shutter	135-239
	Shutter Open	240-255
7	Red Additive	0-255
8	Green Additive	0-255
9	Blue Additive	0-255
10	White Additive	0-255
11	Auto Color Change	0-255
12	Auto Color Speed	0-255
13	Music	0-255
14	Reset	150-198