

Channel	Value from	Value to	Function
1	0	255	X
2	0	255	X fine
3	0	255	Y
4	0	255	Y fine
5	0	255	XY Speed
6	0	255	Dimmer
7	0	4	Shutter closed
	5	250	Strobe effect slow to fast
	251	255	Shutter open
8	0	4	White (open)
	5	13	White / color 1
	14	22	Color 1
	0	31	Color 1 / Color 2
	32	40	Color 2
	41	49	Color 2 / Color 3
	50	58	Color 3
	59	67	Color 3 / Color 4
	68	76	Color 4
	77	85	Color 4 / Color 5
	86	94	Color 5
	95	103	Color 5 / Color 6
	104	112	Color 6
	113	121	Color 6 / Color 7
	122	130	Color 7
	131	139	White (open)
	140	195	Forward rainbow effekt from fast to slow
196	199	Rotation stop	
200	255	Backward rainbow effect from slow to fast	
9	0	5	Open
	6	14	Gobo 1
	15	23	Gobo 2
	24	32	Gobo 3
	33	41	Gobo 4
	42	50	Gobo 5
	51	59	Gobo 6
	60	68	Gobo 7
	69	77	Gobo 8
	78	84	Gobo 1 Shake
	85	91	Gobo 2 Shake
	92	98	Gobo 3 Shake
	99	105	Gobo 4 Shake
	106	112	Gobo 5 Shake
	113	119	Gobo 6 Shake
	120	126	Gobo 7 Shake
	127	133	Gobo 8 Shake
134	194	Forward rainbow effekt from fast to slow	
195	255	Backward rainbow effect from slow to fast	
	0	7	Open

10	8	19	Gobo 1
	20	31	Gobo 2
	32	3	Gobo 3
	4	55	Gobo 4
	56	67	Gobo 5
	68	79	Gobo 6
	80	88	Gobo 1 Shake
	89	97	Gobo 2 Shake
	98	106	Gobo 3 Shake
	107	115	Gobo 4 Shake
	116	124	Gobo 5 Shake
	125	133	Gobo 6 Shake
	134	194	Forward rainbow effekt from fast to slow
	195	255	Backward rainbow effect from slow to fast
11	0	9	Stop
	10	129	Forward Gobo 2 Rotation from fast to slow
	130	134	Stop
	135	255	Backward Gobo 2 Rotation from slow to fast
12	0	255	Focus
13	0	15	Open
	16	255	Prism
14	0	5	Stop
	6	129	Forward Prism Rotation from fast to slow
	130	134	Stop
	135	255	Backward prism ritation from slow to fast
15	0	127	Open
	128	255	Zoom
16	0	7	Empty
	8	47	Auto Play 1
	48	87	Auto Play 2
	88	127	Auto Play 3
	128	167	Auto Play 4
	168	207	Auto Play 5
	208	247	Auto Play 6
248	255	Color Gobo Sound Control	
17	0	7	Empty
	8	32	X/Y Auto run 1
	33	58	X/Y Auto run 2
	59	84	X/Y Auto run 3
	85	110	X/Y Auto run 4
	111	136	X/Y Auto run 5
	137	162	X/Y Auto run 6
	163	188	X/Y Auto run 7
	189	214	X/Y Auto run 8
	215	240	X/Y Auto run 9
241	255	X/Y Sound Control	
18	0	249	No function
	250	255	Reset (10s)

Channel	Value	Function
1	0-255	Master Dimmer
2	0-255	Red
3	0-255	Green
4	0-255	Blue
5	0-255	White
6	0-255	Strobe
7	0-15	None
	16-95	Auto Mode
	96-175	Fade Mode
	176-255	Sound Active
8	0-255	Function Speed
9	0-5	Menu Default
	6-65	Linear Dimmer Mode
	66-125	Curve Dimmer Mode
	126-185	Theatre Dimmer Mode
	186-255	Studio Dimmer Mode